

## Furutech GTX-D Duplex Outlet Wiring Instructions

### Disclaimer/Warning


Always check with your local municipality regarding any modifications to your electrical system to see if any permits and inspections would be required prior to any work.

If you are not comfortable or experienced working with electrical wiring, and if you lack the appropriate tools, then hire an electrician or better yet, a licensed and insured electrical contractor to do the work.

When working with power wiring, there is the risk of injury or death, so KOSMIC assumes no liability for the information provided. And should you make modifications described in this article, you do so at your own risk.

So remember, safety first. And measure twice/cut once.

### Step 1 – Prep Wire and Outlet

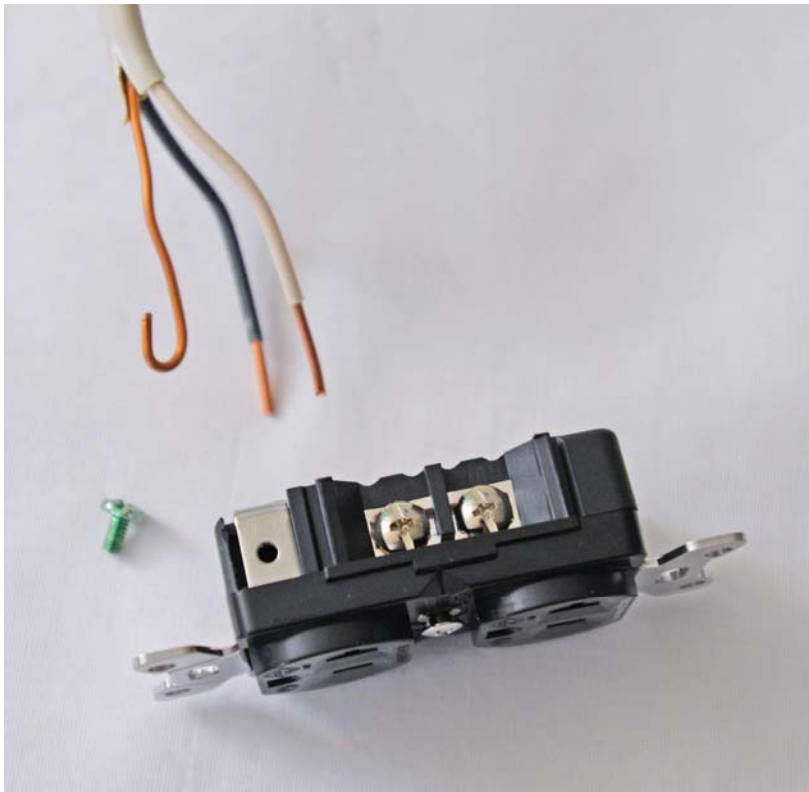

This example shows 12 gauge Romex wire. Strip wire as shown. The proper stripping length is shown on the outlet. Form a "U" in the ground wire.



High Performance Audio • 206-878-3833 • [www.kosmic.us](http://www.kosmic.us)

Copyright © 2016 KOSMIC LLC All rights reserved

## Step 2 – Install Wires



Install the white and black wires into the appropriate clamp hole. The holes are labeled white and black. Install the wires in the second hole away from the ground wire as shown. When installing the outlet in the wall box, install the outlet with the ground wire at the bottom.

## Step 3 – Install Protective Clamp Cover



Install the Protective Clamp Cover. Then install outlet in wall box. You are done.



High Performance Audio • 206-878-3833 • [www.kosmic.us](http://www.kosmic.us)

Copyright © 2016 KOSMIC LLC All rights reserved